 


1. Remove the cover over the SIM socket **(4)**.
2. Open the metal clamp of the SIM card slot by sliding it to the left, and then lift the clamp up.
3. Place a micro-SIM card (external dimensions 15 mm × 12 mm) on the SIM card connector with the cut-off edge in the upper right corner. The contacts must face down.
4. Close the metal clamp and press it gently onto the SIM card then slide it to the right, until it is locked.
5. Replace the cover.

**NOTICE**

When using GSM connection, it is strongly recommended to use the RBIP or SCAIP protocol (refer to the *Reference Manual* for more information on programming). Other protocols are accepted, but they will be transmitted through the GSM voice band. Quality of the communication depends on the chosen protocol, the GSM signal strength and the service provider.

**NOTICE**

Be aware of potential limitations due to network availability. Prioritizing an emergency call may not always be possible.

**NOTICE**

Check the duration and conditions of the SIM contract. Make sure the SIM contract has no restrictions in data connection, voice connection, credit or time. Do not use pre-paid contracts.